


PROVA 200A Solar Module Analyzer

User Manual



PROVA INSTRUMENTS INC.

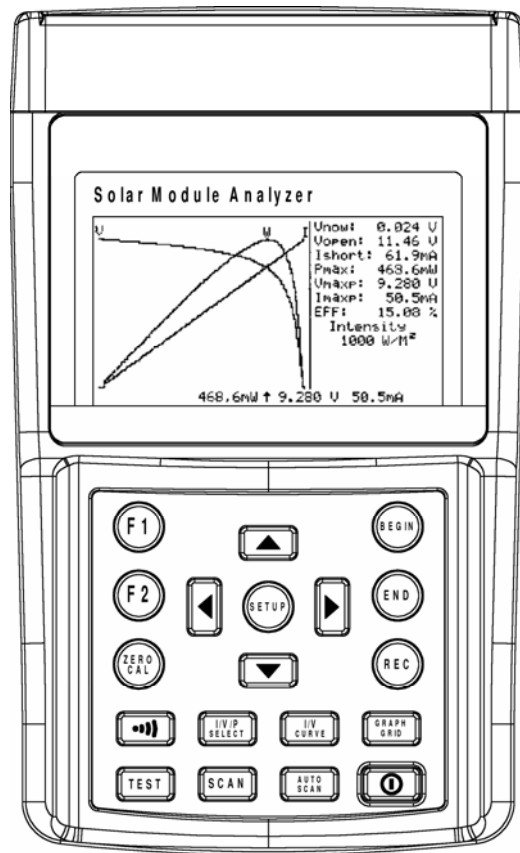

**EN 61010-1:2001
CAT I 60V
Pollution Degree 2**




**This unit passes the following tests
EN61326-1: 2006**

(CISPR11 Class B, IEC/EN 61000-3-2:2006,
IEC/EN 61000-3-3: 1995+A1: 2001+A2: 2005
IEC/EN 61000-4-2/-3/-4/-5/-6/-8/-11)

Safety Symbols

 **WARNING**

Please read the statement thoroughly to prevent injury or loss of life, and prevent damage to this product.



Earth (ground)



DC (Direct Current)



Conforms to relevant European Union directives.



Do not dispose of this clamp meter as unsorted municipal waste. Contact a qualified recycler for disposal.

Caution:



1. The ventilation openings on the unit should not be blocked.

2. Please pay attention to polarity of DC input, follow the polarity info by the input jack.



Caution, Risk of Electric Shock.



This equipment is not for measurements performed for CAT II, III, and IV.



Please remove all the test leads before performing maintenance, cleaning, battery replacement, fuse replacement, etc.



Do Not Plug in the AC adapter when the ambient temperature exceeds 45 °C / 113°F



Do Not change the lithium battery when the ambient temperature exceeds 45°C / 113°F

Table of Contents

I. Preparation	1
II. Features	2
III. Panel Description	3
A. Front Panel	3
B. Rear Panel	6
C. Connecting Wires (Connectors)	7
IV. Operation	8
A. Selected Condition of Auto Scan, Manual Scan, or Test	9
B. Connecting Diagram	12
C. Auto Scan	16
D. Manual Scan	18
E. Single Point Test	20
F. Save Testing Results	22
G. Zero Calibration	23
H. Clear recorded testing data	24
I. Setup Menu	25
V. Application Notes	27
A. Quality Control in the Production Line, Warehouse, or Site of Installation	27
B. Identify the Solar Power System Requirement	28
C. Maintenance of Solar Panels	29
D. Verify the Best Installation Angle of Solar Panels	30
VI. Specifications	31
A. Electrical Specifications	31

Table of Contents

B. General Specifications	33
VII. Battery Replacement / Recharging	34
VIII. Fuse Replacement	36
IX. Maintenance & Cleaning	38

I. Preparation

This Solar Module Analyzer uses rechargeable lithium battery.

Before using the new rechargeable lithium battery, please charge it for 10~12 hours continuously for better battery life.

The lithium battery is pre-installed at the factory.


Users can plug in the AC adaptor and turn on the Analyzer. Then the rechargeable lithium battery is charged automatically.

II. Features

- I-V curve test for solar panel/module
- Max. solar panel power (Pmax) search by auto-scan: 60V, 6A (180W capability)
- Best resolution: 1mV, 0.1mA
- Manual single point I-V test
- Max. voltage (Vmaxp) at Pmax
- Max. current (Imaxp) at Pmax
- Voltage at open circuit (Vopen)
- Current at short circuit (Ishort)
- I-V curve with cursor to display each data point
- Efficiency (%) calculation of solar panel
- Solar panel area setting: 0.001 m² ~ 9999 m²
- Standard light source setting: 10 W/m² ~ 1000 W/m²
- Communicate with PC via USB cable
- Min. power setting for alarm function
- Built-in calendar clock
- Built-in battery charging circuit
- AC adaptor and rechargeable lithium battery
- Memory size: 100 records
- Large LCD with backlight
- **Option:** portable thermal printer (model: 300XP or 310XP) to print (hardcopy) the LCD displays of solar module analyzer

III. Panel Description

A. Front Panel

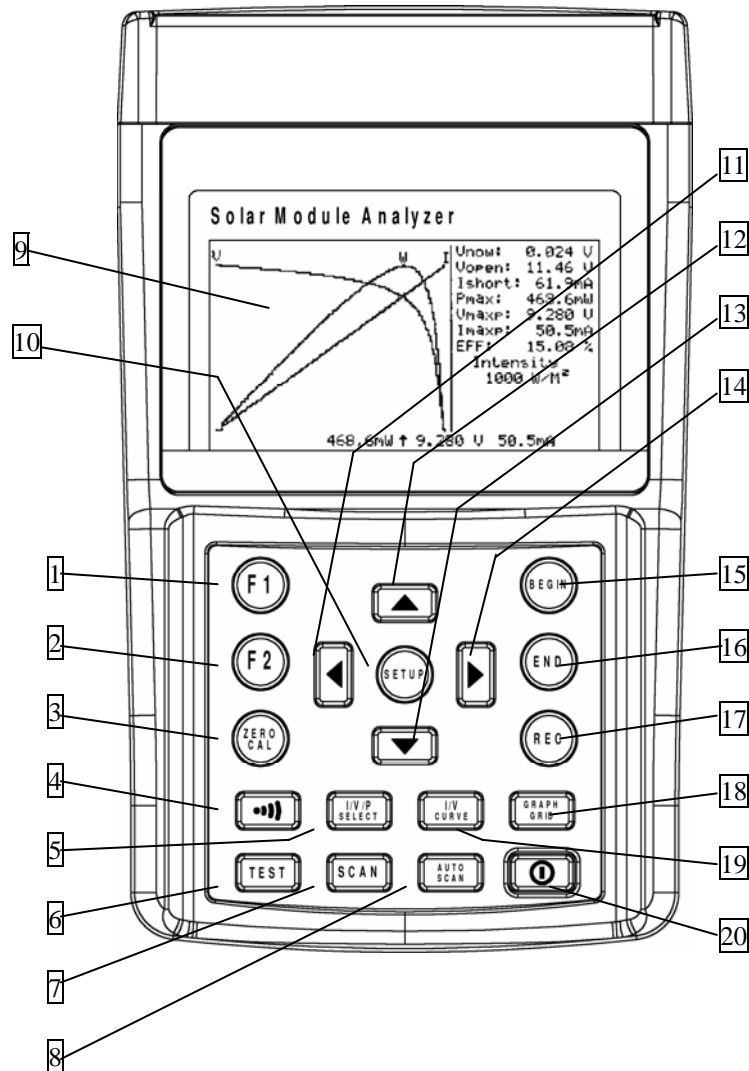

1. **F1 button:** (Reserved)

2. **F2 button:** (Reserved)

3. **ZERO CAL:**

Zero calibration of voltage and current. Connect (short) the two Kelvin clips together and press this button. Regular calibration of zero would maintain the accuracy of the instruments.

4. **(buzzer) button:**

Press this button to turn on/off the beeper (low Power) alarm function.

5. **I/V/P SELECT button:**

Select display of I-V/ V-I curve, P-V/P-I curve, or both curves.

6. **TEST button:**

Single point I-V test based upon specified value.

7. **SCAN button:**

Manual scan I-V curve test based upon specified value.

8. **Auto Scan button:**

Auto scan I-V curve test.

9. **LCD:**

LCD displays measurement data and curves.










10. **SETUP button:**

Enter/Exit SETUP menu.


11. **button:**

(1) In a curve, press it to move the cursor left.

(2) In SETUP menu, press it to decrement value by 1.


12.  **button:**
In the SETUP menu, press ▲ button to select previous item.
13.  **button:**
In the SETUP menu, press ▼ button to select next item.
14.  **button:**
(1) In a curve, press it to move the cursor right.
(2) In the SETUP menu, press it to increment value by 1.
15.  **BEGIN button:**
"Start scanning point (current)" setting.
16.  **END button:**
"Stop scanning point (current)" setting.
17.  **REC button:**
(1) Record the present measurement data.
(2) How to clear recorded data: keep pressing REC button and turn on the analyzer, then all the data recorded in the analyzer will be deleted.
18.  **GRAPH GRID button:**
Display/Cancel graph grid.
19.  **I/V CURVE button:**
Select I or V as horizontal coordinate.
20.  **Power button:**
Turn on/off the power of Solar Module Analyzer.

B. Rear Panel

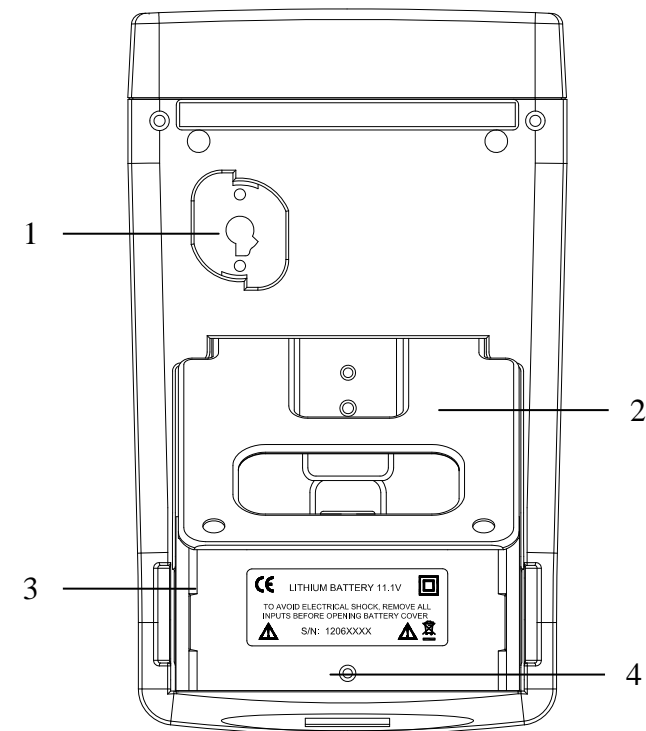

1. **Communication Window:**
To connect Solar Module Analyzer with PC via USB cable.
2. **Stand.**
3. **Battery cover.**
4. **Screw of battery cover.**

C. Connecting Wires (Connectors)

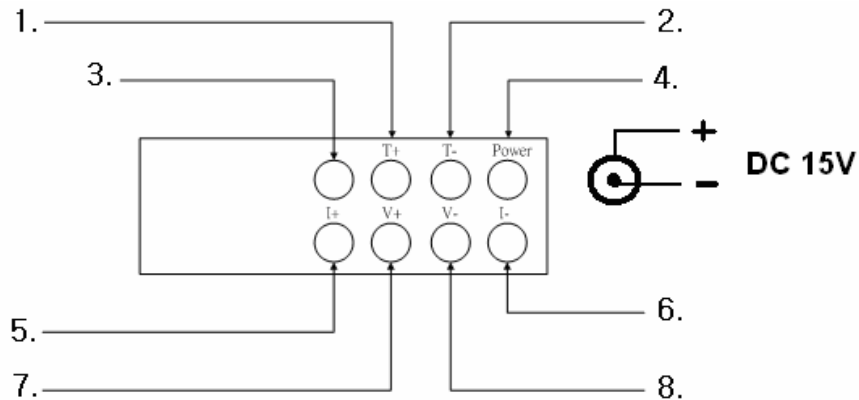


1. T+ Terminal (Kelvin Clips).
2. T- Terminal (Kelvin Clips).
3. Terminal Reserved for Factory Test.
4. Power for the input of AC adaptor.
5. I+ Terminal (Alligator Clips).
6. I- Terminal (Alligator Clips).
7. V+ Terminal (Alligator Clips).
8. V- Terminal (Alligator Clips).

IV. Operation



Warning: when users see “Overheated” warning shown in LCD:

1. Users must wait during this “Overheated: cooling” period before they start next simulation.
2. And if users would like to turn the unit off, they must wait for another 3 min. (at least) for the cooling fan to cool off the internal components.

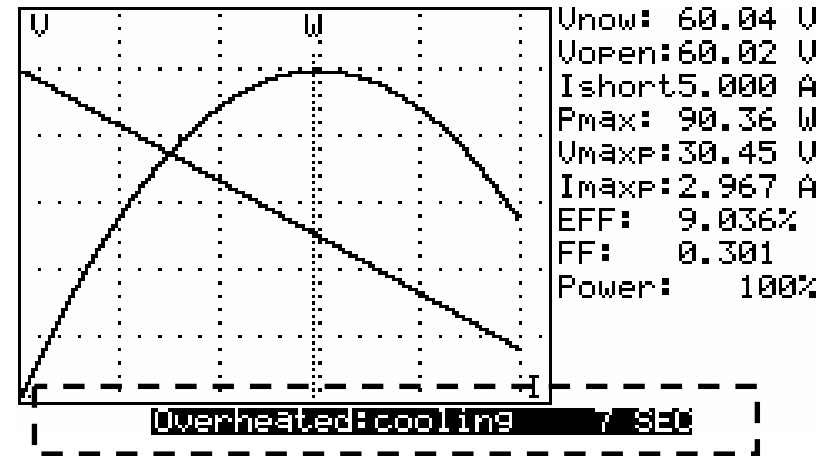




Warning: When using batteries as the power source, please do not plug in an AC adaptor. Or the power source will be stopped and the data will disappear.




Note: When pressing any button, users will hear a sound of buzzer. When keeping pressing it for more than 2 seconds, users will hear another sound of buzzer.

A. Selected Condition of Auto Scan, Manual Scan, or Test

A-1 Users should first select **AUTO SCAN** () to obtain a general idea of characteristics of a solar panel.

1. Press  button to turn on the Analyzer. Properly connect the pair of Kelvin clips to the solar panel and the Analyzer. The red Kelvin clip is for positive pole and the black Kelvin clip for negative pole.
2. Press  button to start **AUTO SCAN**. After the scanning is finished, the result will come out like below.

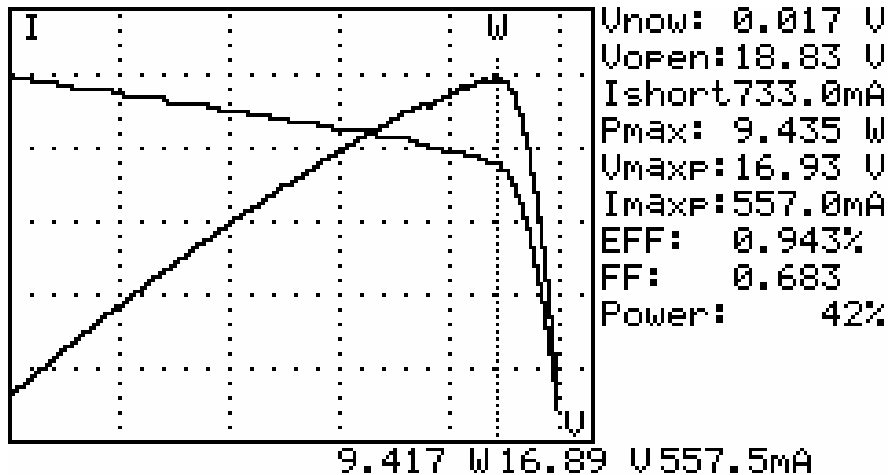


A-2 Afterward, if users are interested in a specific operating range, they can enter the beginning and ending values of scan in the setup menu.

Press **SCAN** () button to test the specific range.


1. Press  button to turn on the Analyzer. Properly connect the pair

of Kelvin clips to the solar panel and the Analyzer. The red Kelvin clip is for positive pole and the black Kelvin clip for negative pole.


2. Press  button to enter the SETUP menu: (Type in the current range for scanning)


Current Range of Scan begin: 200mA

Current Range of Scan end: 548mA


After setting up the current range, press  button again to exit the SETUP menu.


Note: If the “Current Range of Scan begin” is over “Ishort”, then the scanning will not be performed and no result will come out.


3. Press  button to start **MANUAL SCAN**. After the scanning is finished, the result will come out like below.

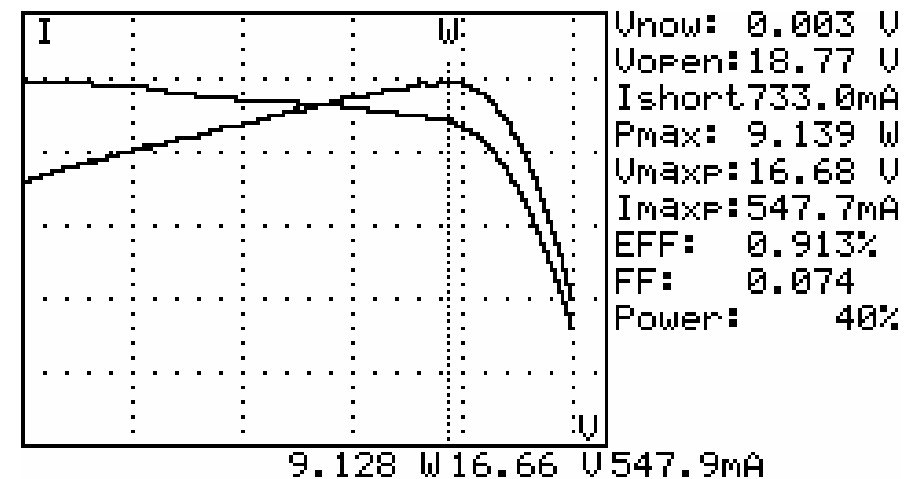



A-3 If users are interested in a specific point of test current, users can


enter the current value for a **Single Test Point**. Press **TEST** () to test the characteristics at the current.

1. Press  button to turn on the Analyzer. Properly connect the pair of Kelvin clips to the solar panel and the Analyzer. The red Kelvin clip is for positive pole and the black Kelvin clip for negative pole.


2. Press  button to enter the SETUP menu: (Type in the testing current) **Single Test Point:609mA**

After setting up the current value, press  button again to exit the SETUP menu.


3. Press  button to start **Testing a Single Test**. After the testing is finished, the result will come out like below. The result (P, V, I) is shown in reverse video as below.

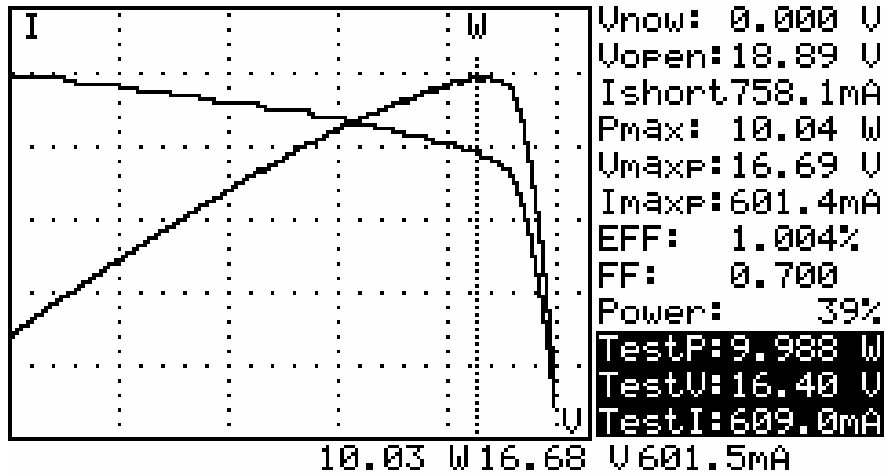

B. Connecting Diagram

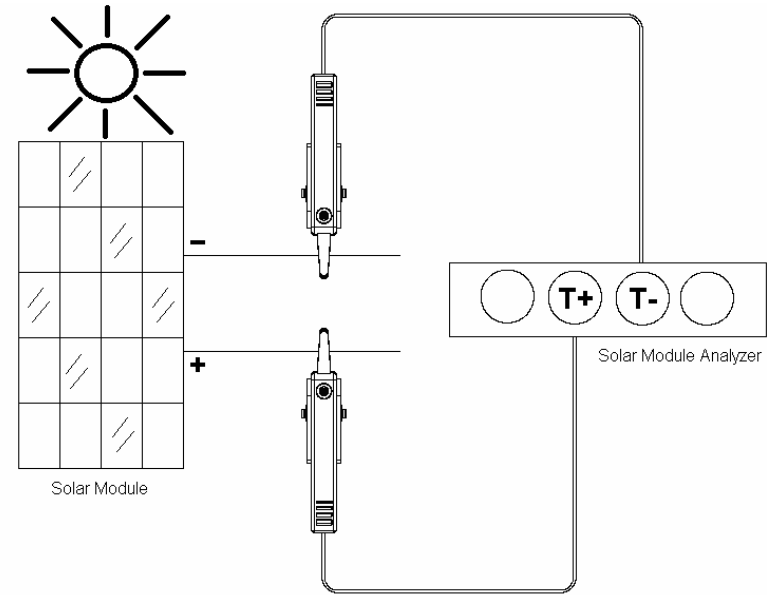



Kelvin Clip Connecting Diagram

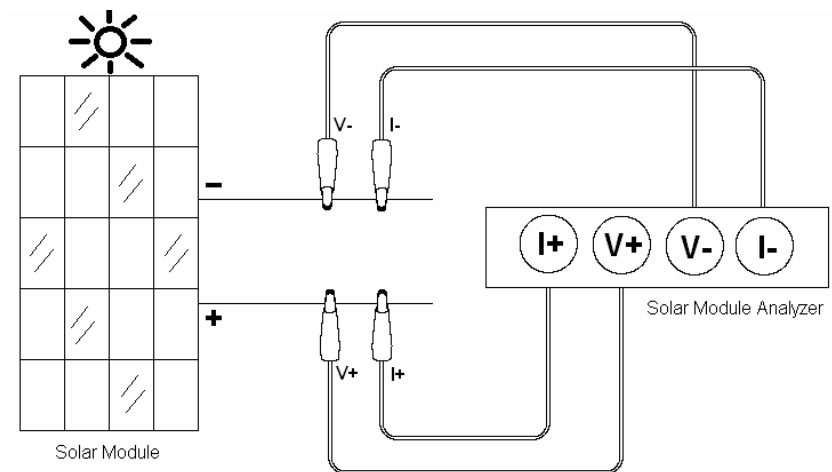

Alligator Clip Connecting Diagram

Four Wire Measurement

Two jaws of each connector are required to touch the metal part of terminals of a solar panel.

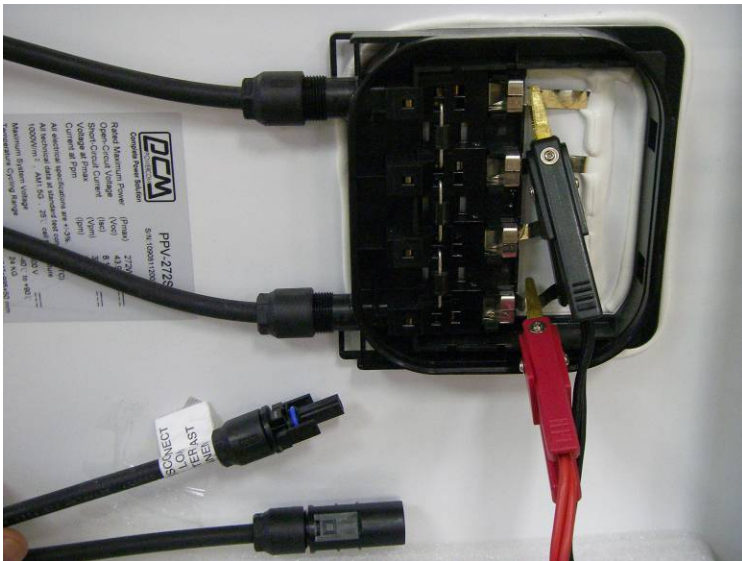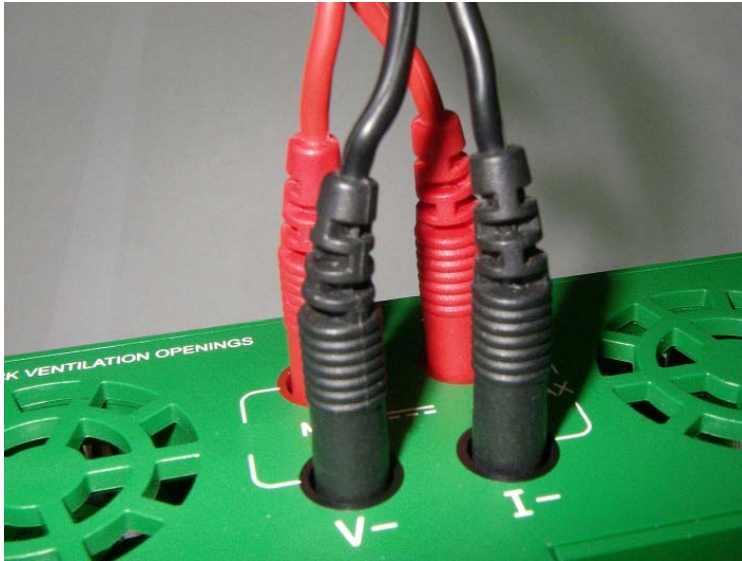

Two Wire Measurement

When users would access the special connectors of a solar panel without opening the terminal box, users can perform two wire measurement with the supplied jumpers. The jumpers convert four wire measurement to two wire measurement. Then only one jaw of each test lead is required to touch the metal part of connectors.

First, plug in the jumpers into sockets according to the color (Black to black, red to red). Then plug the Kevin clips on to the jumpers as following:





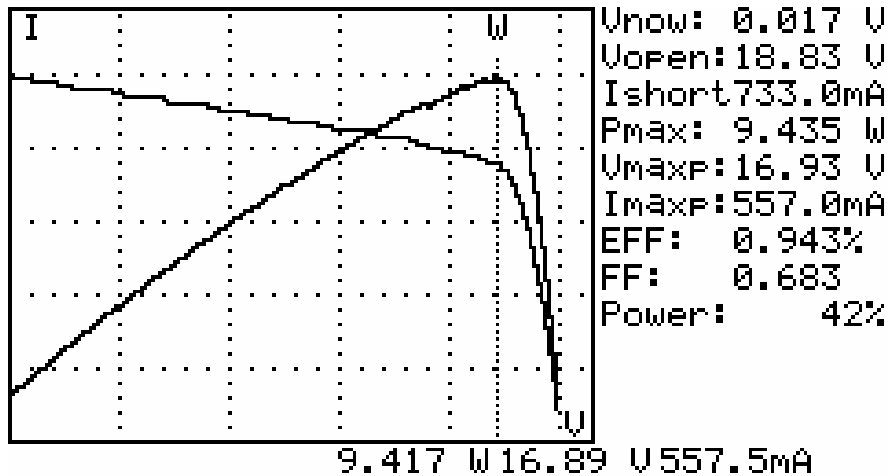


Then two wire measurement can be performed even only one jaw of test leads touches the metal part of connectors as following:



C. Auto Scan



1. Press  button to turn on the Analyzer.
2. Properly connect the pair of Kelvin clips to the solar panel and the Analyzer. The red Kelvin clip is for positive pole and the black Kelvin clip for negative pole. (refer to above Connecting Diagram).
3. Turn on any available light source (e.g. halogen lamp, xenon lamp, tungsten lamp, ...) and let it illuminates solar panel uniformly. Or place the solar panel under the sun.
4. Press  (**AUTO SCAN**) button to perform Auto-scan. After the scanning is finished, the result will come out like below.
5. The unit automatically measures the followings parameters: V_{open} , I_{short} , P_{max} , V_{maxp} , and I_{maxp} . Based upon those parameters, the unit run simulation and draw I-V / V-I curve and P-V / P-I curves in LCD.
6. Users can move the cursor to review each individual values along the curve.



There is a time delay before the unit performs the "Auto Scan". This time delay allows the light source to be turned on before "Auto Scan" starts. Time delay can be set in the SETUP menu.


Note: If the short circuit current (I_{short}) exceeds 6A, Auto Scan will not be performed. Please select Manual Scan and limit the ending value of Scan to be less than 6A.

D. Manual Scan


1. Press  button to turn on the Analyzer.
2. Properly connect the pair of Kelvin clips to the solar panel and the Analyzer. The red Kelvin clip is for positive pole and the black Kelvin clip for negative pole.
3. Press  button to enter the SETUP menu: (Type in the current range for scanning)

Current Range of Scan begin: 200mA


Current Range of Scan end: 548mA

After setting up the current range, press  button again to exit the SETUP menu.

Note: If the "Current Range of Scan begin" is over " I_{short} ", then the scanning will not be performed and no result will come out.





4. Press  (**SCAN**) button to start **MANUAL SCAN**. The analyzer run simulation from the BEGIN value to END value, and draw I-V / V-I curve and P-V / P-I curve in LCD. Users can move the cursor to review each individual values along the curve.

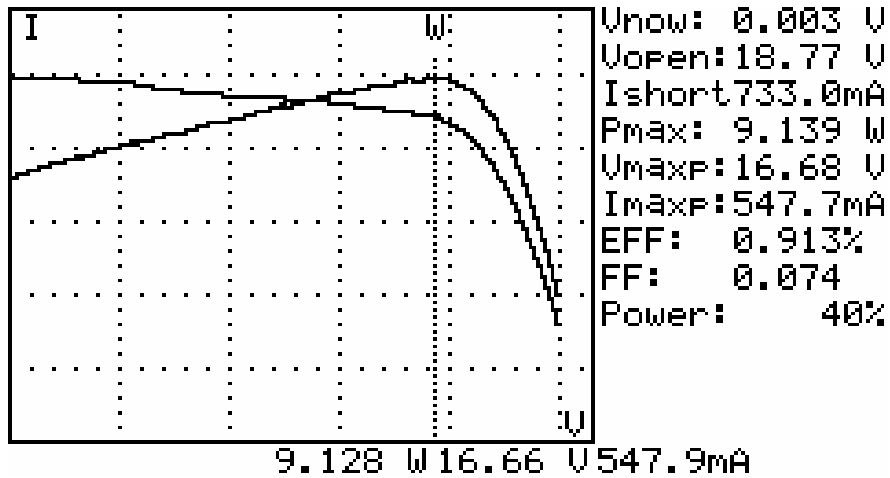
After the scanning is finished, the result will come out like below.




There is a time delay before the unit performs the "Manual Scan". This time delay allows the light source to be turned on before "Manual Scan" starts. Time delay can be set in the SETUP menu.

E. Single Point Test

1. Press  button to turn on the Analyzer.
2. Properly connect the pair of Kelvin clips to the solar panel and the Analyzer. The red Kelvin clip is for positive pole and the black Kelvin clip for negative pole.
3. Press  button to enter the SETUP menu: (Type in the testing current) Single Test Point:609mA
 After setting up the current value, press  button again to exit the SETUP menu.
4. Press  button to start **Testing a Single Test**. After the testing is finished, the result will come out like below. The result (P, V, I) is shown in reverse video as below.

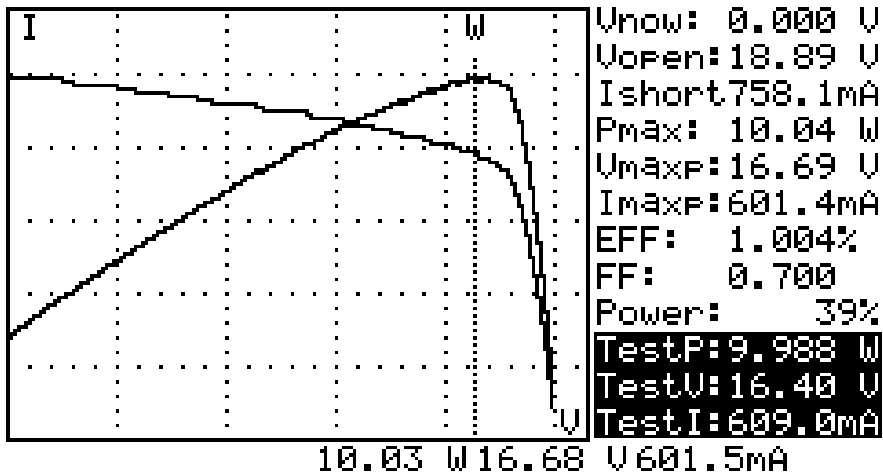


 Time delay in the "Single Point Test" allows the current simulation to last longer. Though the max. value is 9.999 sec., the time delay is changed to 10 msec. if power is over 100 W. The time delay is extended to 3 seconds if power is less than 100 mW.

Result of Single Point Test


Unow: 50.09 U
 Uopen:
 Ishort:
 Pmax:
 Umaxp:
 Imaxp:
 EFF:
 FF:
 Power: 91%
TestP: 12.87 W
TestU: 1.324 U
TestI: 9.726 A


Press AUTO or START button


F. Save Testing Results

When users finish a test (by taking one of the above-mentioned methods; Auto-scan, Manual-scan or Single Point Test), the testing result can be saved in the memory of the analyzer.

The procedures of saving testing results:


1. Perform a test by Auto-scan, Manual-scan or Single point test.
2. After the test is finished, press  (REC) button to save the (present) testing result on display. On the top right display it shows REC:1 (in reverse video) which means the first record was saved.

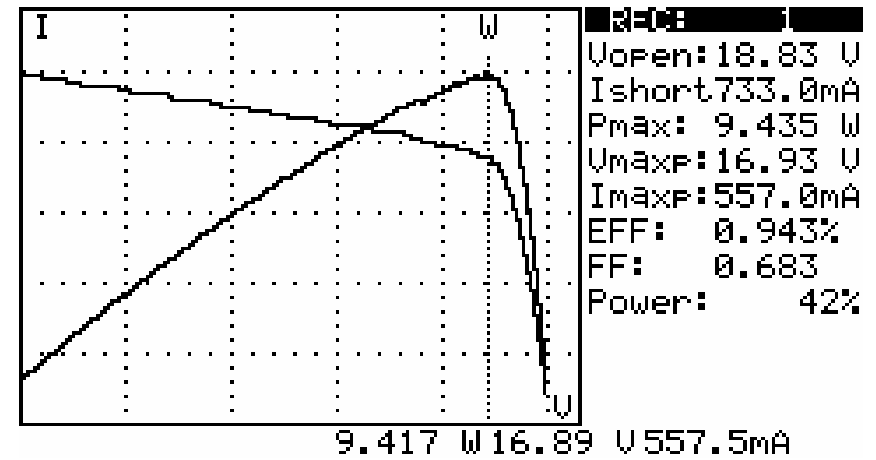



 Please use the application software provided with the Analyzer to read the saved testing results. (refer to the Software Manual)

G. Zero Calibration

Calibration of voltage and current zero would improve the accuracy of the instrument before usage.

Connect (short) the two Kelvin clips together and press the  button. A message of “ZERO CAL...” is shown in LCD. Zero calibration is finished when the message disappears.



Regular calibration of zero would maintain the accuracy of the instruments.

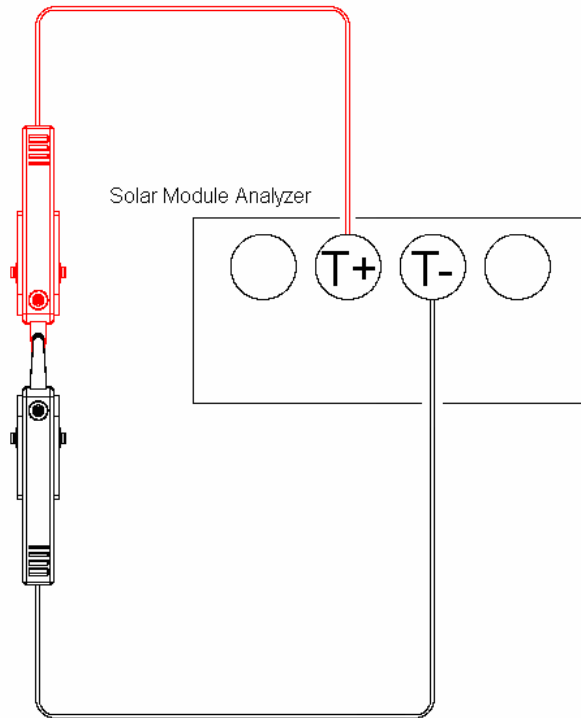

H. Clear recorded testing data

Users can clear the recorded testing data in the Analyzer.

The procedures of deleting saved data:

1. Keep pressing  (REC) button and turn on the Analyzer (i.e. press  button) at the same time.




2. After turning on the Analyzer, all the data recorded in the Analyzer (memory) will be deleted. When the buzzer beeps twice, it means the record data is already cleared.



After performing this CLEAR function, all the recorded data in Analyzer (memory) will be deleted completely and can not be restored. If it is necessary to keep the testing data, please use the Application Software to download and save them before deleting them from the Analyzer.

(refer to the Software Manual)

I. Setup Menu

1. Press  (SETUP) button to enter the Parameter Setting screen.
2. Press  or  buttons to select the setting items.

```
Time delay before scan: 2000mS  V1.00
Current Range of Scan begin: 900.0mA
Current Range of Scan end: 99.9mA
Area of Solar Cell or Panel: 517.5 Cm²
Irradiance: 1000W/m²
Single Test Point: 500.0mA
Alarm of Low Power: 99.88 W

Year  Month  Date  Hour  Minute  Second
2008   11    10    8    46    40
```

(1) **Time delay before scan.**

This delay allows light source to illuminate the solar panel before scan starts.

(2) **Current Range of Scan begin.**

The beginning value of current for scan to start.

(3) **Current Range of Scan end.**

The ending value of current for scan to stop.

(4) **Area of Solar Cell or Panel.**

Based upon the input area and irradiance, this unit can calculate the solar power converting efficiency

(5) **Irradiance.**






Light intensity in W/m^2 .

(6) **Single Test Point.**

Users can enter a specific value of current here. When users press the TEST button, this specific value of current will be simulated and result will be shown.

(7) **Alarm of Low Power.**

If the maximum power is lower than this value, then a beep sound will be heard.

3. Press  or  buttons to select the setting items.
Press  or  buttons to change the setting values, or press them for few seconds to promptly change setting values.
4. After setting Parameters, press  button to exit SETUP menu.


V. Application Notes

A. Quality Control in the Production Line, Warehouse, or Site of Installation.

Manufacturers of solar panels can test the characteristics for quality control purpose in the production line. Due to the advantage of portability of the unit, quality inspectors can randomly pick samples of solar panels and test them in the warehouse to assure quality before shipment.

Installation engineer can randomly test samples of solar panels at site to verify the quality of solar panels used at site of installation.

B. Identify the Solar Power System Requirement.

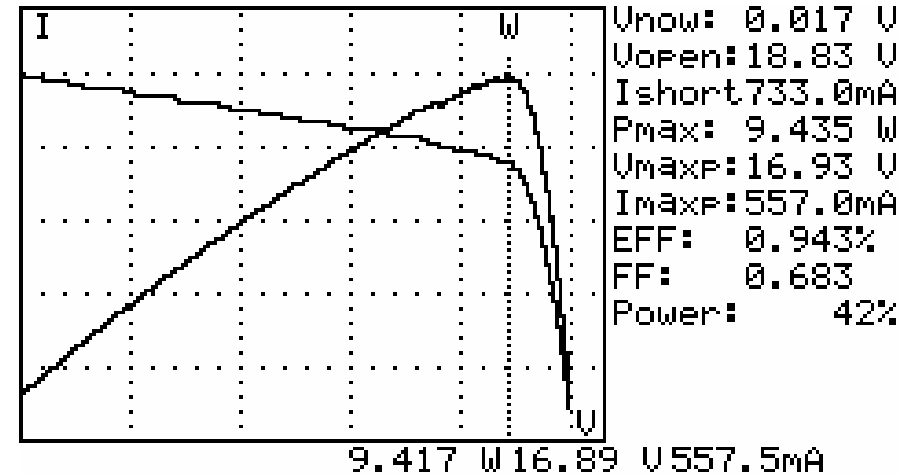


Measure the actual maximum power (P_{max}), voltage (V_{maxP}), and current (I_{maxP}) at maximum power. Instead of using the rated maximum power, the system designer needs to be aware of the actual solar power from the solar panel under actual operating condition. So designer can actual know how many pieces of solar panels are required to generate specific power.

The voltage and current under actual operating condition (in the morning, at noon, and in the afternoon) are required for system designer to design the optimal charging system, so most of the solar power can be absorbed and stored in the battery.


Users can test the characteristics of solar panel at different time of day and store the data. Then the designer can know if the solar system can generate appropriate power at any time.

C. Maintenance of Solar Panels.


Normal I-V Curve

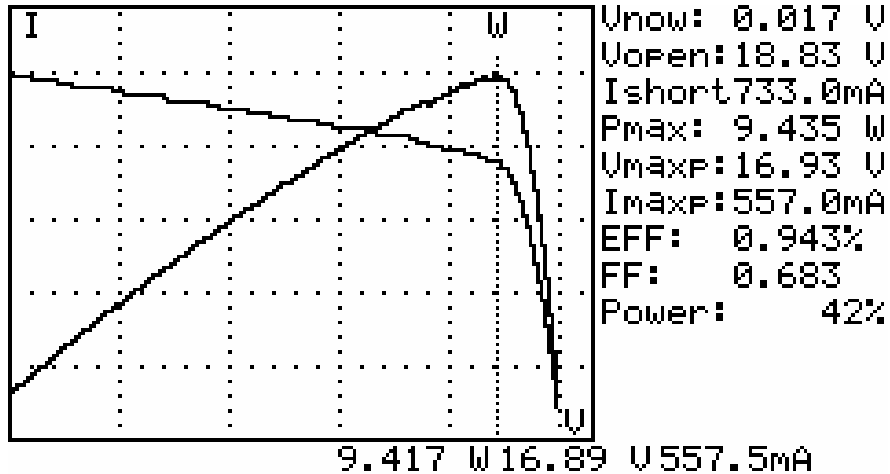

Abnormal I-V Curve (Cells at the corner of solar panel are defected)

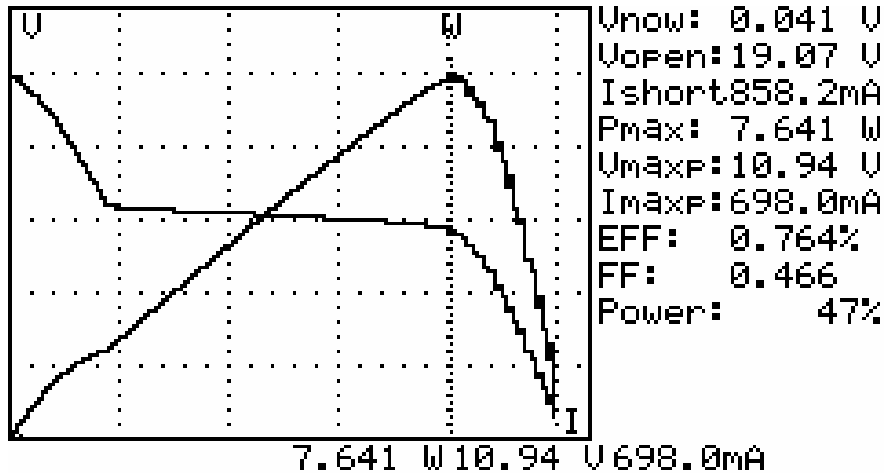

Abnormal I-V Curve (defected cells scattered over the solar panel)

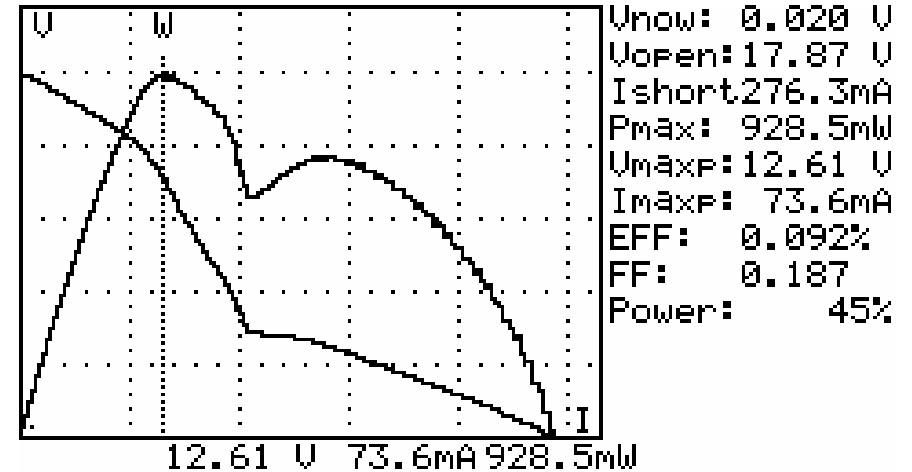

The technicians or maintenance engineers can store the characteristics data of solar panels in the beginning. And compare the characteristics data in the weekly, monthly or yearly maintenance. If the characteristics of any solar panels are different from the previous data, technicians or maintenance engineers can further identify the problems of solar panels.

For example, if any cells of solar panels are damaged, the I-V curve would be very different from a typical curve. If the solar panels are covers by a lot of dust, the I-V curve or the maximum power would be much lower than previously stored data. Once defected panels are found, technicians or maintenance engineers can replace them with new panels.

D. Verify the Best Installation Angle of Solar Panels.

Engineers can collect data of installation angle at different date and time by using the unit at site of installation. The data can be used as reference to design automated angle adjustment system. Or the data can be used to select an optimal angle for a fixed angle installation

VI. Specifications

A. Electrical Specifications

(23°C±5°C, Four-wire Measurement, The maximum power limit is 180W.)

DC Voltage Measurement

Range (60V / 6A)	Resolution	Accuracy
0 ~ 6 V	0.001 V	± 1 % ± (1 % of Vopen ± 9 mV)
6 ~ 10 V	0.001 V	± 1 % ± (1 % of Vopen ± 0.09 V)
10 ~ 60 V	0.01 V	± 1 % ± (1 % of Vopen ± 0.09 V)

Vopen: open circuit voltage of solar cell or module.

If users use alligator clips to measure voltage only, they must make V+ clip connect with I+ clip; V- clip connect with I- clip. Thus, 4-wire measurement is converted to 2-wire measurement.

DC Current Measurement

Range (60V / 6A)	Resolution	Accuracy
0.01 ~ 0.6 A	0.1 mA	± 1 % ± (1 % of Ishort ± 0.9 mA)
0.6 ~ 1 A	0.1 mA	± 1 % ± (1 % of Ishort ± 9 mA)
1 ~ 6 A	1 mA	± 1 % ± (1 % of Ishort ± 9 mA)

Ishort: short circuit current of solar cell or module.

Internal Resistance at Ishort: 0.05 Ohm.

Ishort is measured with internal resistance, circuit resistance, and test lead resistance.

DC Current Simulation*

Range (60V / 6A)	Resolution	Accuracy
0.01 ~ 1 A	0.1 mA	± 1 % ± 0.9 mA
1 ~ 6 A	1 mA	± 1 % ± 9 mA

* If Current is greater than 6A, test (Auto-Scan, Scan, or Test) can not be Performed.

* Maximum duration of simulation is 9.999 seconds if power is less than 100 W.

* Duration of simulation is 10m seconds if power is greater than 100 W.

B. General Specifications

Battery Type:	Rechargeable Lithium Battery, 1600mAh
Data Logging Memory Size:	100 records
AC Adaptor:	AC 100 ~ 240V input DC 15V / 1~3A output
Dimension:	257(L) x 155(W) x 57(H) mm
Weight:	1160g / 40.0oz (Batteries included)
Operation Environment:	5°C ~ 50°C, 85% RH
Temperature Coefficient:	0.1% of full scale / °C (< 18°C or > 28°C)
Storage Environment:	-20°C ~ 60°C, 75% RH
Accessories:	User Manual x 1, AC adaptor x 1 Optical USB cable x 1 Rechargeable lithium battery x 1 Software CD x 1, Software Manual x 1 Kelvin Clips (6A max) x 1 set 4-Wire to 2-Wire Connector x 1 set Carrying bag x 1

VII. Battery Replacement / Recharging

If the lithium battery can not be charged, users should always purchase a new lithium battery from the distributor or importer. The charging circuit built-in is designed only for the lithium battery included.

The lithium battery is always sold with the plastic battery cover. Do not purchase a lithium battery from a source which is not approved by the manufacturer. **Non-approved lithium battery could cause damage to the instrument or hazard to the users.**



Steps of Battery Replacement:

1. Unscrew and remove the battery with cover.
2. Put in a new recharging battery with cover.
3. Screw the battery cover.

Please follow the below steps to charge the lithium battery:

1. Connect the AC Adaptor with the Solar Module Analyzer.
2. Turn on the Solar Module Analyzer.
3. During recharging (takes 10 hours), the % of power is shown 100%.
4. After recharging, remove the AC Adaptor and LCD displays
“Power:100%”.

VIII. Fuse Replacement

When the voltage can not be measured ($V_{now} = 0V$) after properly connecting the Analyzer and the solar panel, please check the fuse.


If the fuse is damaged (burned), please replace a new fuse by following the procedures:

1. Turn off the Analyzer and remove all the connecting wires and power sources.
2. Unscrew the battery cover. Disconnect the lithium battery and remove the lithium battery with cover.
3. Unscrew the (4pcs.) screws of the bottom cover. Remove the bottom cover. Remove the power connector connecting the bottom cover and the circuit board (J2).
4. Remove the damaged (burned) fuse.
5. Put in a new fuse of the same specifications (5A / 250V).
6. Connect the power connector. Replace and screw the bottom cover.
7. Replace the lithium battery with cover. Replace and screw the battery cover.



After removing the bottom cover, please do not touch the parts on the circuit board, especially the communication LED. Or the communication function will be damaged.

Location of Fuse

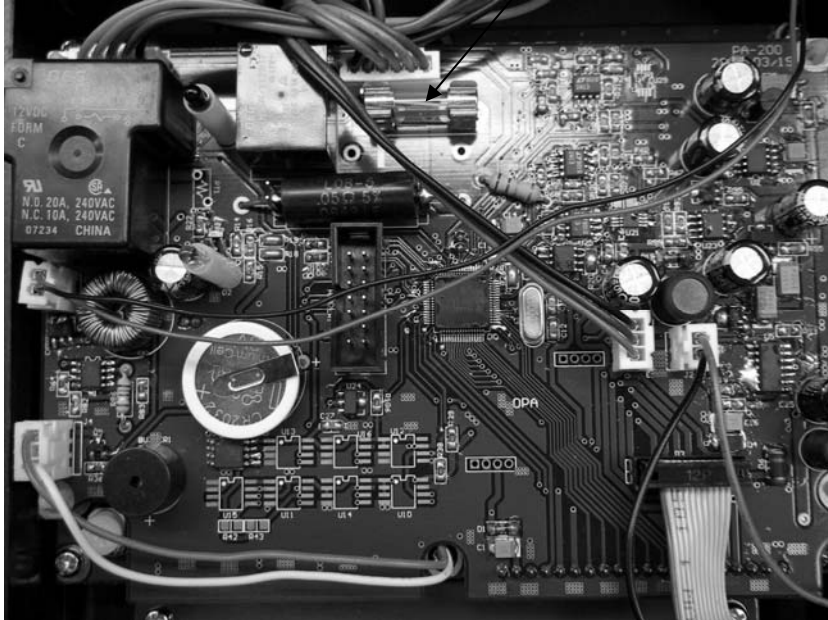

IX. Maintenance & Cleaning

1. Servicing not covered in this manual should only be performed by qualified personnel. Repairs should only be performed by qualified personnel.
2. Periodically wipe the case and cable with a damp cloth and detergent; do not use abrasives or solvents.
3. Please remove all the batteries if users won't use the Solar Module Analyzer for a long time.

Address of Agent, Distributor, Importer, or Manufacturer

